



FRENIC

5000VG7S Series

INSTRUCTION MANUAL

High-Performance, Vector Control Inverter

CT Use (150%)

200V Series 0.75kW/FRN0.75VG7S-2 ~90kW/FRN90VG7S-2	400V Series 3.7kW/FRN3.7VG7S-4 ~400kW/FRN400VG7S-4 710kW/FRN710BVG7S-4DC 800kW/FRN800BVG7S-4DC
----------------------------------------------------------	------------------------------------------------------------------------------------------------------------

VT Use (110%)

200V Series 1.5kW/FRN0.75VG7S-2 ~110kW/FRN90VG7S-2	400V Series 5.5 kW/FRN3.7VG7S-4 ~710kW/FRN630VG7S-4
----------------------------------------------------------	-----------------------------------------------------------

HT Use (200%/170%)

200V Series 3.7kW/FRN3.7VG7S-2 ~55kW/FRN55VG7S-2	400V Series 3.7 kW/FRN3.7VG7S-4 ~55kW/FRN55VG7S-4
--------------------------------------------------------	---------------------------------------------------------



CAUTION

- Read all operating instructions before installing, connecting (wiring), operating, servicing, or inspecting the inverter.
- Ensure that this instruction manual is made available to the final user of the inverter.
- Store this manual in a safe, convenient location.
- The product is subject to change without prior notice.